




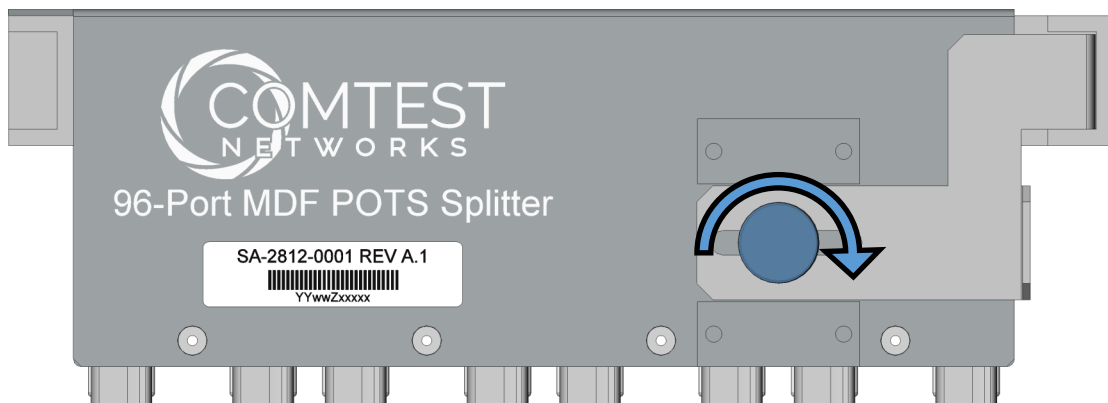


96-Port MDF POTS Splitter Install Guide

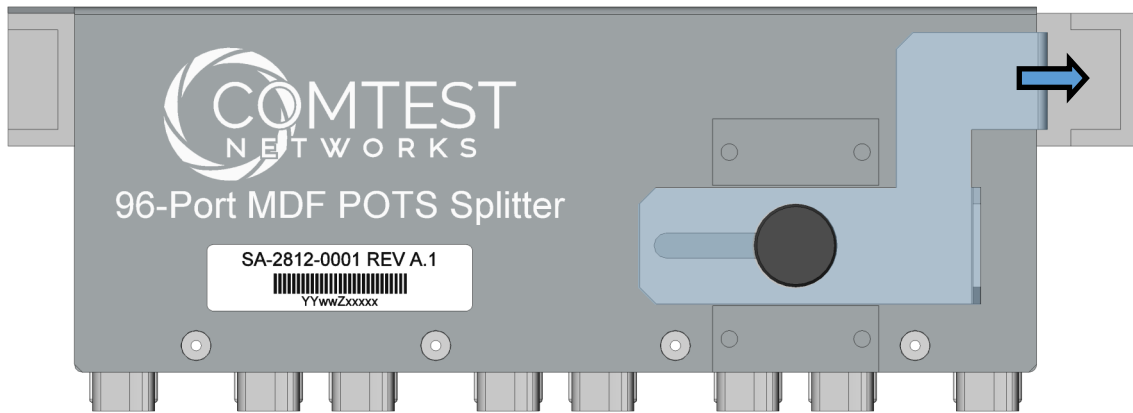

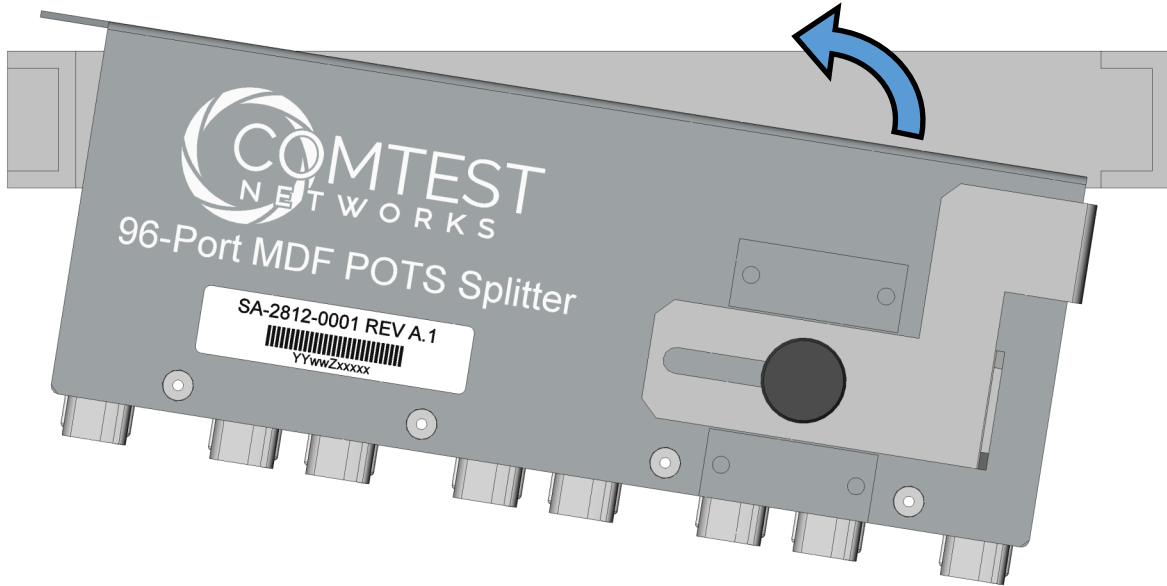

96-Port MDF POTS Splitter Install Guide

RJ21 PIN OUT

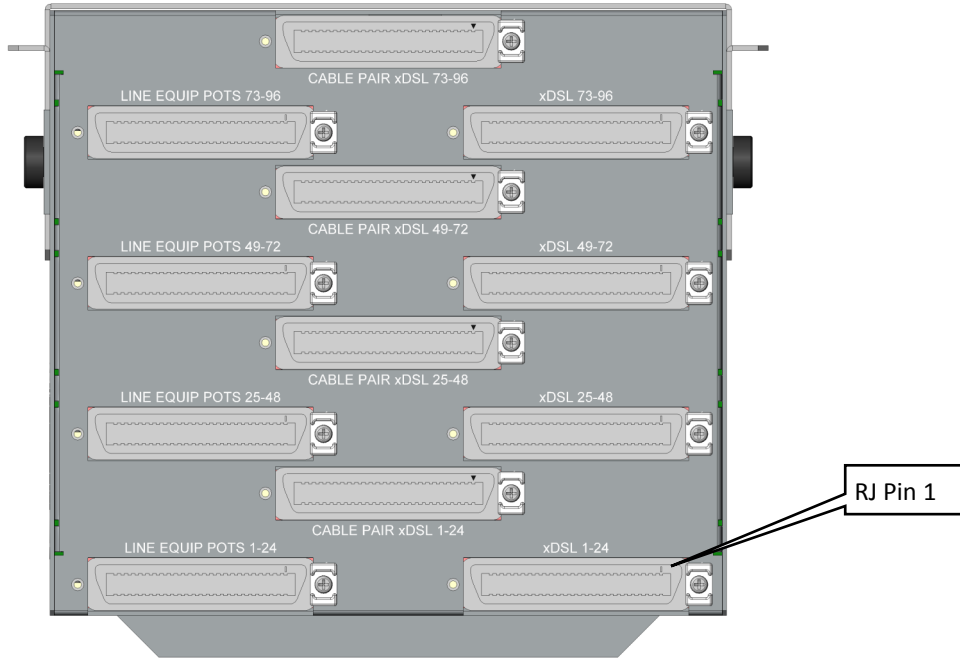

PORTS				SIGNAL	RJ PIN
1-24	25-48	49-72	73-96		
1	25	49	73	RING	1
				TIP	26
2	26	50	74	RING	2
				TIP	27
3	27	51	75	RING	3
				TIP	28
4	28	52	76	RING	4
				TIP	29
5	29	53	77	RING	5
				TIP	30
6	30	54	78	RING	6
				TIP	31
7	31	55	79	RING	7
				TIP	32
8	32	56	80	RING	8
				TIP	33
9	33	57	81	RING	9
				TIP	34
10	34	58	82	RING	10
				TIP	35
11	35	59	83	RING	11
				TIP	36
12	36	60	84	RING	12
				TIP	37

PORTS				SIGNAL	RJ PIN
1-24	25-48	49-72	73-96		
13	37	61	85	RING	13
				TIP	38
14	38	62	86	RING	14
				TIP	39
15	39	63	87	RING	15
				TIP	40
16	40	64	88	RING	16
				TIP	41
17	41	65	89	RING	17
				TIP	42
18	42	66	90	RING	18
				TIP	43
19	43	67	91	RING	19
				TIP	44
20	44	68	92	RING	20
				TIP	45
21	45	69	93	RING	21
				TIP	46
22	46	70	94	RING	22
				TIP	47
23	47	71	95	RING	23
				TIP	48
24	48	72	96	RING	24
				TIP	49