


### Installation Guidelines

The Coax-RJ Plug RPF has two connection interfaces:


- **Coaxial** - for connection to 75Ω coaxial cable.
- **RJ11 or RJ45 plug** - DSL signal.



## Coax-RJ Plug RPF Installation Guide

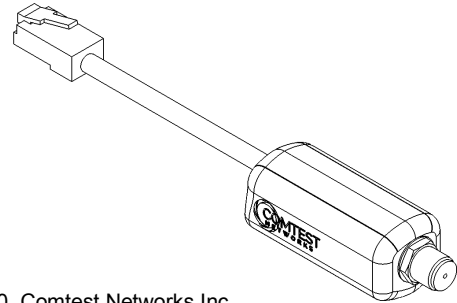

Copyright © 2020, Comtest Networks Inc.

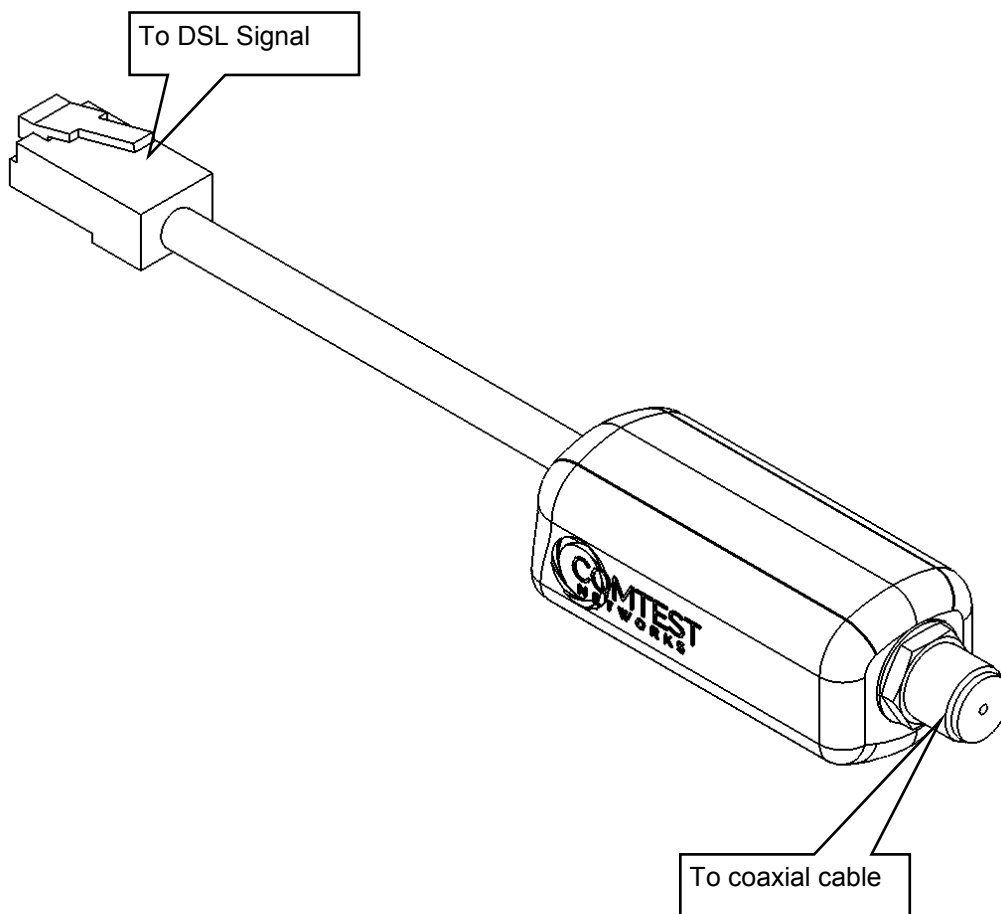

**For Assistance**

[techhelp@comtestnetworks.com](mailto:techhelp@comtestnetworks.com)

1-877-369-5499

[www.comtestnetworks.com](http://www.comtestnetworks.com)