



Voice Distribution Block Installation Guide

Installation Guidelines

The Voice Distribution Block has two connection types:





- **IDC** - Phone line connection point.
- **RJ** - Equipment/testing connection point.
- All tip & rings are connected to each other.

⚠ To reduce the risk of fire, use only No. 26 AWG or thicker gauge telecommunication line cord/cable.

⚠ Insulation displacement connectors [IDC]. Use solid wire; not stranded. **Do not strip wires**

⚠ If the pair of wires have been previously used, remove used wire section before inserting into the IDC connectors on the Voice Distribution Block.

Unit: SA-4310-0002
Install Guide: PD-4310-0008-14
Copyright © 2021, Comtest Networks Inc.

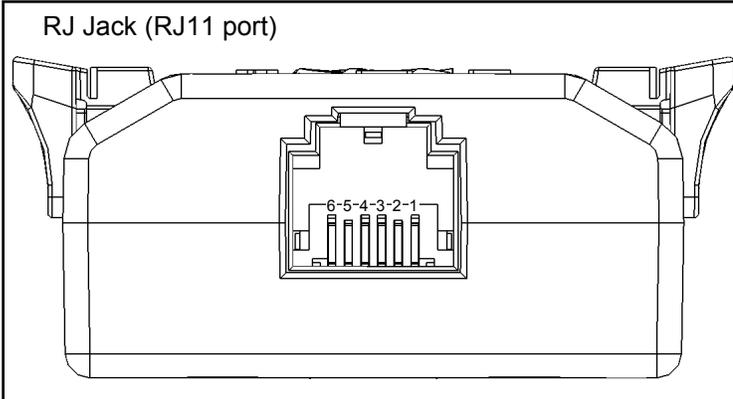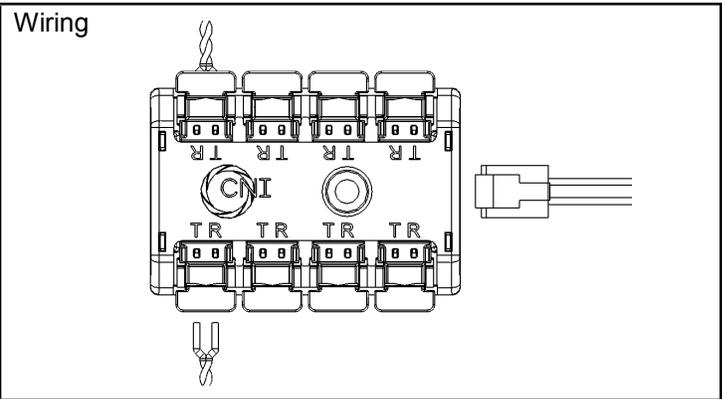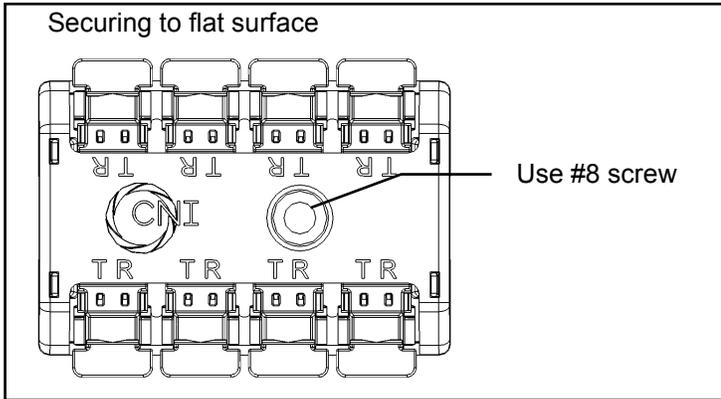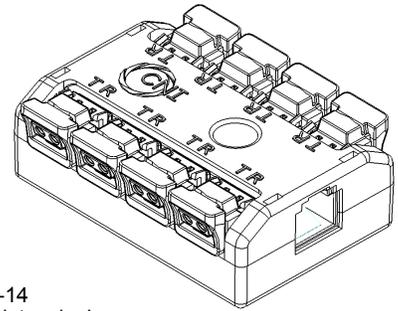

| Pin | Port |
|-----|---------------|
| 1 | No connection |
| 2 | No connection |
| 3 | Ring |
| 4 | Tip |
| 5 | No connection |
| 6 | No connection |

