




# NID-TJFB POTS Splitter Installation Guide

## Installation Guidelines


The NID-TJFB has four connection types:

- **Modem** - ADSL / VDSL2 modem.
- **Line** - line coming from the central office.  
(Red-Green & Black-Yellow wires)
- **Phone** - customer's telephone.
- **Test Jack** - RJ11 to verify line signal.

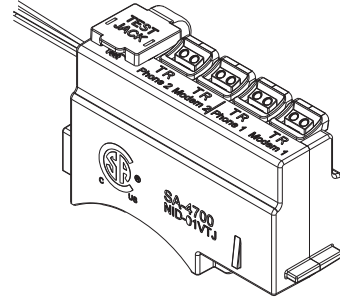

Copyright © 2014, Comtest Networks Inc.

- ⚠ To reduce the risk of fire, use only **No. 26 AWG** or thicker gauge telecommunication line cord/cable.
- ⚠ Insulation displacement connectors [IDC].  
**Do not strip wires**
- ⚠ If the pair of wires have been previously used, remove used wire section before inserting into the IDC connectors on the NID-TJFB.
- ⚠ Two primary protection blocks required

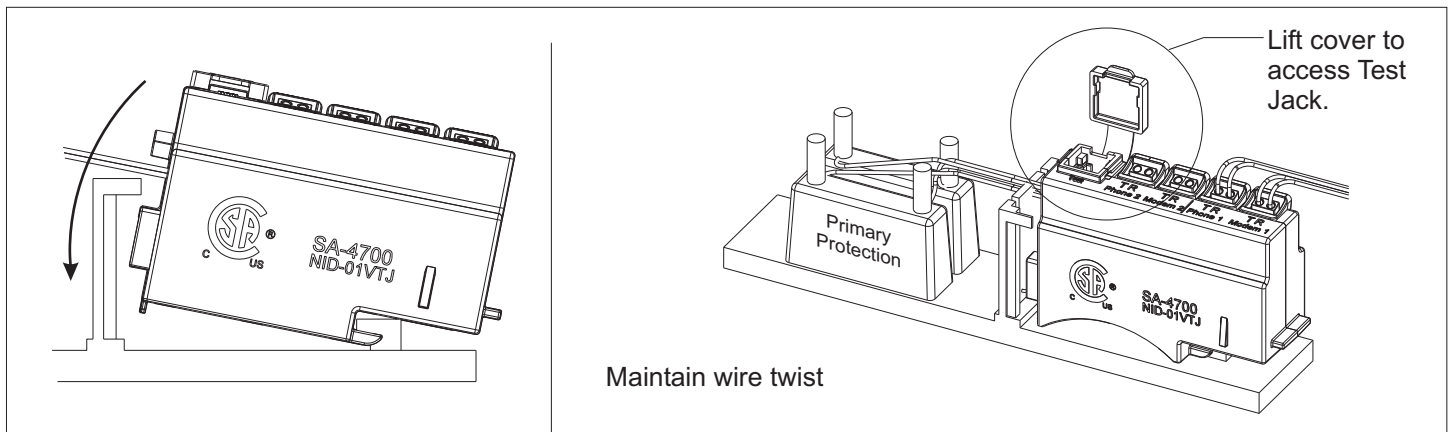

### Wires

Line 1	Tip - Green Ring - Red	Phone 1	Modem 1
Line 2	Tip - Black Ring - Yellow	Phone 2	Modem 2

